 
## **FM1300 INSTALLATION MANUAL**






This manual is intended for the users of the FM1300 ceiling mounting bracket. It includes the instructions for mounting the FM1300 ceiling mounting bracket to the ceiling.




- This bracket is intended to be used with some models of dome cameras. Ask your retailer for details on a specific model and do not use it with other models of cameras.
- This installation should be performed by a qualified service personnel in conformance to all local codes.
- You may need to reinforce the ceiling. If the ceiling is not strong enough to support the camera, the camera may fall.
- · Do not use this product for other purposes.


## Mounting

- 1 Assemble the camera body to the bracket by tightening the screws.
  - DC-D2233WHX / DC-D3233WRX / DC-D3233RX / DC-D3233X Models: Screw No. 5 (3-point), PCB Support 8.8mm
  - DC-D2233R / DC-D2233 Models: Screw No. 4 (2-point), PCB Support 20.4mm
  - DC-D2233WHR / DC-D2233WR / DC-D2233W Models: Screw No. 3 (3-point), PCB Support 23.1mm
  - Other Plastic Dome Models: Screw No. 2 (3-point), No PCB support necessary
  - Other Vandal Dome Models: Screw No. 1 (3-point), No PCB support necessary
- 2 Connect the cable through the cable hole and screw the safety wire to the bracket to prevent the bracket from falling on to the floor.

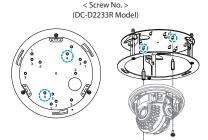


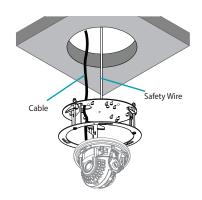

 
3 Mount the bracket to the ceiling, then fix it with the calmp (3-point) by turning the clamp screws clockwise.



4 Assemble the dome cover to the camera body.

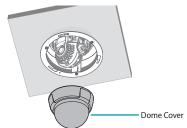

5 Assemble the bracket lid to the bracket.

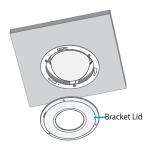

## **Dimensions**

